

Nolan handset guide


User guide

For assembly assistance,
please visit fully.com/instructions,
contact us at 888-508-3725
or email support@fully.com

For assistance in Europe,
visit fully.com/contact

fully

Handset settings

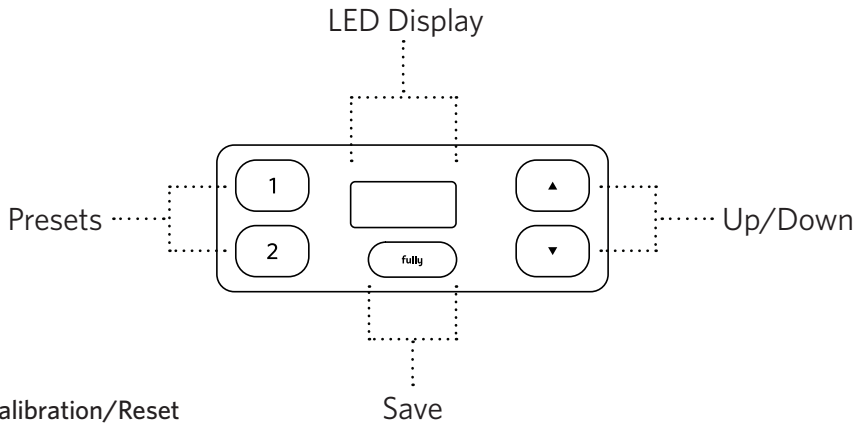

Initial Calibration/Reset

1. Press the ▼ until the desk reaches the lowest position. Release the ▼.
2. Press and hold ▼ for about 5 seconds until the desk moves down and then up. Release.

Setting Memory Preset

1. Move the table to the desired height.
2. Press **fully**.
3. Press memory position '1' or '2'.
4. Display will show 'S1' or 'S2'. Table height will be display again after a few seconds.

Move to Memory Preset

Europe: Press and hold '1' or '2' until desk reaches preset height.

North America: Either press and hold '1' or '2', until desk reaches preset height. Or double press '1' or '2' and it will move to preset height automatically.

Adjust the Height Readout

1. Press **fully** and release it.
2. Then press and hold the ▼ for longer than 5 seconds.
3. When display starts flashing, adjust the readout with ▲ and ▼.
4. To save press **fully**.

Change Readout Between Inches and Centimeters

1. Press '1', '2', and ▲ for 3 seconds. The display will show 'S0'.
2. Press ▲ until it shows 'S5'.
3. Press **fully**.