

# Nolan handset guide


User guide

For assembly assistance,  
please visit [fully.com/instructions](https://fully.com/instructions),  
contact us at 888-508-3725  
or email [support@fully.com](mailto:support@fully.com)

For assistance in Europe,  
visit [fully.com/contact](https://fully.com/contact)

**fully**

# Handset settings

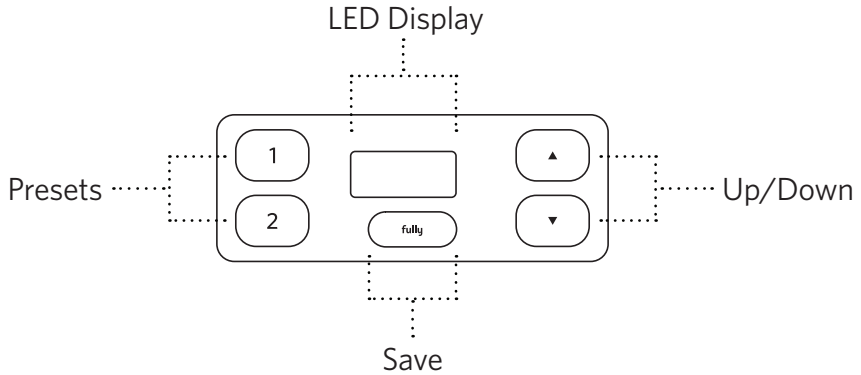

## Initial Calibration / Basic Reset

1. Press the ▼ until the desk reaches the lowest position. Release the ▼.
2. Press and hold ▼ for about 5 seconds until the desk moves down and then up. Release.

## Hard Reset

1. Press '1', '2', and ▲ until the display shows 'S' and a number (e.g. S 4).
2. Press ▼ until the display shows "S 0".
3. Press **fully**. The display will change a few times and then show a flashing 0.
4. Press and hold ▼ until height is displayed. The desk is now reset.

## Setting Memory Preset

1. Move the table to the desired height.
2. Press **fully**.
3. Press memory position '1' or '2'.
4. Display will show 'S1' or 'S2'. Table height will be display again after a few seconds.

## Move to Memory Preset

Europe: Press and hold '1' or '2' until desk reaches preset height.

North America: Either press and hold '1' or '2', until desk reaches preset height. Or double press '1' or '2' and it will move to preset height automatically.

## Adjust the Height Readout

1. Press **fully** and release it.
2. Then press and hold the ▼ for longer than 5 seconds.
3. When display starts flashing, adjust the readout with ▲ and ▼.
4. To save press **fully**.

## Change Readout Between Inches and Centimeters

1. Press '1', '2', and ▲ for 3 seconds. The display will show 'S0'.
2. Press ▲ until it shows 'S5'.
3. Press **fully**.