

Remi using your own top

User guide

For assembly assistance,
please visit fully.com/instructions,
contact us at 888-508-3725
or email support@fully.com


For assistance in Europe,
visit fully.com/contact

fully

Custom top guidelines

Minimum and maximum dimensions are determined to optimize the stability and reduce hazards such as a bowing top or tripping.

Width Minimum	38"
Width Maximum	70"
Depth Minimum	27"
Depth Maximum	30"

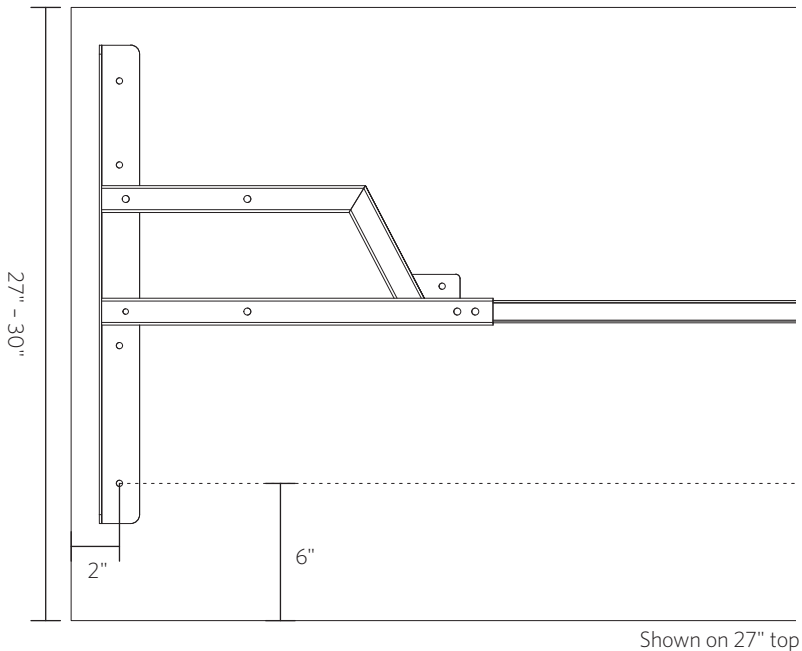

There's no one right way to position your frame on your desktop but there are a few things you'll want to keep in mind.

Generally speaking, the desktop should be centered over the frame side-to-side, and positioned slightly forward of center (towards the user) front-to-back.

Side-to-side position

In our experience, desks have better lateral stability the further apart the legs are. We position the screw holes for the Side Brackets 2" in from the sides of the desktop. This leaves about 1" of desktop overhang and maximizes lateral stability.

Placing the holes at least 2" in from the sides lowers the chance that your desktop will split during drilling.

Front-to-back position

To avoid a tripping hazard with the feet, ensure the front-most hole of the Side Bracket is at least 6" from the front of your desk.

For reference, the Side Bracket is 21" in length.

Laying it out

The easiest way to position your own desktop is to partially assemble the frame and use it as a guide. This frame assembly is easier to maneuver than the entire frame and will allow you to see exactly how things line up and where all of the holes should be.

1. Lay your desktop on a padded workspace with the underside facing up, and the front of the desktop towards you.
2. Without the Lifting Columns, attach the Side Brackets to the Frame Ends as shown in Step 1, on page 3 in the Remi Assembly Instructions.
3. Slide the Center Rails into the Frame Ends.
4. Position the frame assembly on the underside of your desktop, with the screw holes in the Side Brackets 2" or more from the side edges of the top, and the front-most hole 6" or more from the front (user-facing) edge of the top.
5. Your Control Box fits best placed toward the back of the desk. For placement refer to Step 6 in the Remi Assembly Instructions.

Everything you need
to find your work flow

